

IMPORTANT AMENDMENT TO THE USER'S MANUAL

CSC500: One-Touch Memory Setting & Dialing

Instructions found on page 13 in the instruction manual.

Storing Memory Numbers (while the telephone is not in use)

1. Lift the handset or press the speakerphone key (you will continue to hear the dial tone throughout the process. This is normal).
2. Press the **Store Key** and **enter the phone number** you want to store.
3. Press the **Store Key** again.
4. Press the **Memory Dial Key** you want to use for that phone number. The number is now saved!



Repeat for each memory dial key you want to use (you do not need to hang up between each new number you are storing). After storing the 8 Photo Memory Numbers, you may want to utilize the Memory Card to write down the name or phone number that corresponds with each Photo Key. The Memory Card is located on the right side of the phone.



www.clearsounds.com