


Quick Guide


Model CL-30

Amplified DECT Telephone with Talking CID & Talk-Back Feature

Serene Innovations, Inc.
14615 Carmenita Rd.
Norwalk, CA 90650
Tel: 562 407 5400
Toll-free Help Line
(866)376-9271, M-F,
9AM-5PM PST

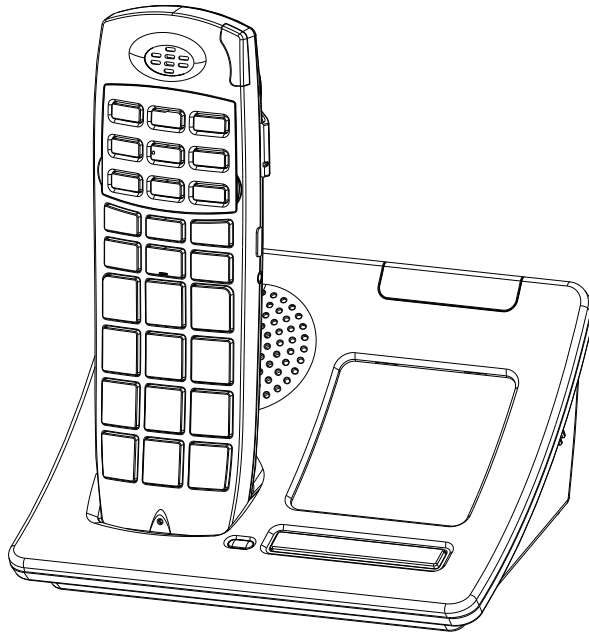


CONTENTS AND PARTS CHECKLIST

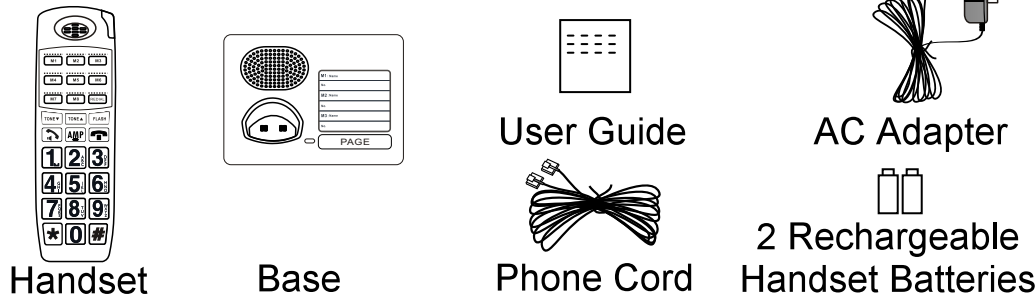


INSTALLATION DIAGRAM

1. Install rechargeable batteries in handset (included) and base (batteries not included) as shown.
2. Connect AC adapter and phone cord to the base as shown.
3. Charge handset for 24 hours before use.

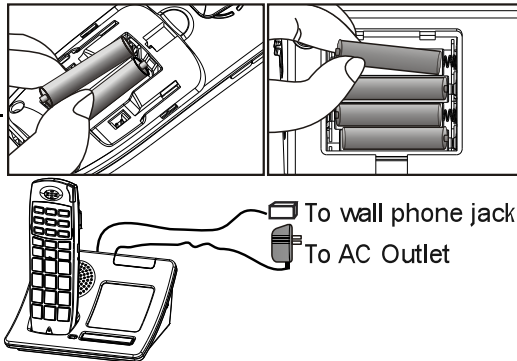

 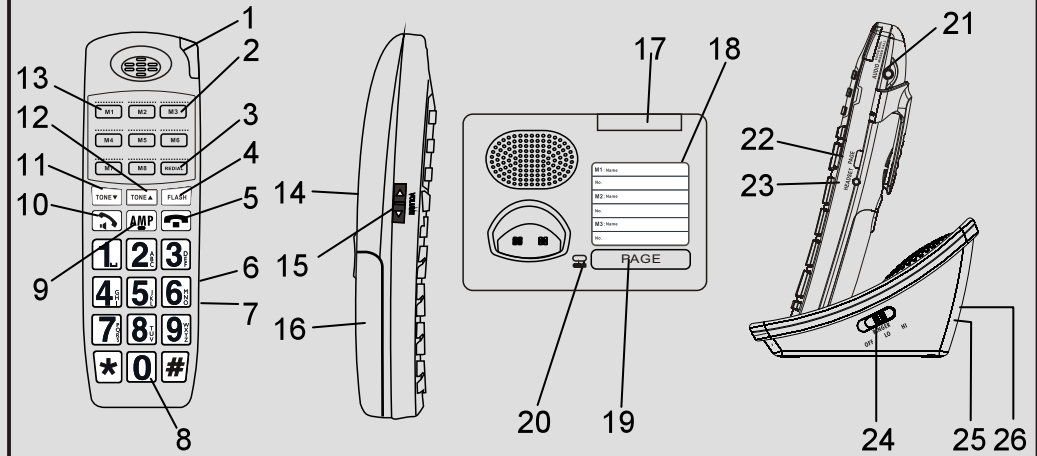


FEATURE LIST and OVERVIEW






1. **In-Use / Ring Flasher / Voice mail / Missed Call** indicator
2. **M2 to M8** buttons: One - touch memories
3. **REDIAL** button: Redial / Pause
4. **FLASH** button: Generates a "Flash" signal to activate call waiting
5. **END CALL** button: Press to end a call.
6. **Auto-Amplifier Switch**: Enables automatic **AMP** function.
7. **Talking CID/ Talking Keypad Switch**: (6 & 7 are in battery compartment).
8. **Keypad**
9. **AMP** (Amplify) button with indicator: Press to engage extra handset receiver amplification.
10. **CALL** button: Press to make or answer a call. During a call, press to engage speakerphone.
11. **TONE▲** button: For tone control and ringer volume setting.
12. **TONE▼** button: For tone control and ringer tone setting.
13. **M1** button: One-touch that activates speakerphone.
14. **Speaker**
15. **VOLUME** Up/Down (side)
16. **Battery Compartment Cover**
17. **Base Flasher / In-Use** Indicator
18. **One-Touch Memory Directory Label**





Answering a call

1. Press  button when phone rings.
(Press  to engage speakerphone if need).
2. Press  button to end the call.

 
Making a Call

1. Enter phone number in idle mode.
2. Press  button to go on-line and dial.
(Press  to engage speakerphone if need).
3. Press  button to end the call.

 


AMP Function, Volume & Tone Controls

1. During a call, Press **AMP** button to toggle amplify function.
Caution: When it is On (illuminated), an extra level of amplification is added to the receiver volume.
2. Press   Volume buttons (on the side) to adjust the volume level (5 settings).
3. While **AMP** is ON, press  or  buttons to select a tone setting (4 settings) for best voice clarity.

Programming One-Touch Memories

1. While off-line, enter phone number.
2. Press and hold  (or M1 to M8) for 5 seconds to save.

Dial from a One-Touch Memory



1. While off-line, press  to select.
2. Press  to go on-line and dial.
3. Press  to end the call.

19. **Page Button:** Press to page all registered handsets
20. **Charging Indicator**
21. **Audio Jack:** For receiver audio output.
22. **Page button:** Press to intercom or transfer a call.
23. **Headset Jack**
24. **Base Ringer Volume Control**
25. **AC Adapter Jack (rear):** For connection to power
26. **Phone JACK (rear):** For connection to phone line.

 

Reset Missed Call Indicator

While off-line, press and hold  button for 5 seconds to reset.

Power Down A handset


1. While off-line, hold  for 5 seconds to power down.
2. To power up, press and hold  for 5 seconds.
3. Wait for a confirmation tone before using. This indicates handshaking has been established with base.

Register A New Handset

1. Press and hold  button on base for 5 seconds so it goes into Registration mode (confirm by a double beep & flashing LED).
2. Press and hold  on handset to register.
3. Wait for a confirmation tone.

Automatic AMP & Talking Switches

1. Open battery compartment and locate two small slide switches.
2. Set Switch 1 to ON if you want **AMP** to be ON every time.
3. Set Switch 2 to ON for talking CID and talking keypad.

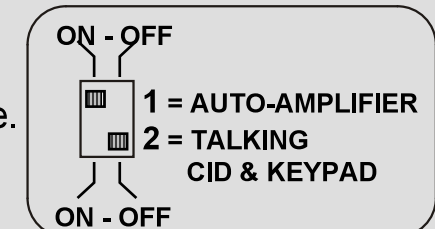

Language Switch

1. Locate Language switch in the battery compartment.
2. Move switch to select English or French.