

# iLuv<sup>®</sup>

 
**Wireless Charging Bluetooth<sup>®</sup>  
Jumbo LCD Display Dual  
Alarm Clock FM Radio,  
USB Charging Port and Bed  
Shaker**

TimeShaker 6Q Wow

**User Manual** (Ver 1.0)



# WARNING AND SAFETY INSTRUCTIONS

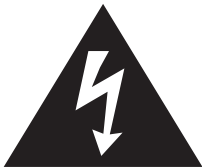

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.




CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONEL.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. All the safety and operating instructions should be read before the product is operated
2. The safety and operating instructions should be retained for future reference.
3. All warnings on the product and in the operating instructions should be adhered to.
4. All operating and use instructions should be followed.
5. Use of controls or adjustments or performance other than those specified may result in hazardous radiation exposure.
6. Do not use this product near water or expose to rain to prevent fire or shock hazard, i.e. bathtub, washbowl, kitchen sink, laundry tub, wet basement, or swimming pool, etc.
7. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
8. Unplug TimeShaker 6Q Wow during lightning storms or when unused for long periods of time.
9. When main plug is connected, TimeShaker 6Q Wow is operational. In order to disconnect TimeShaker 6Q Wow completely, the main plug should be disconnected from the main socket outlet.
10. Battery should not be exposed to excessive heat, such as sunshine or fire.
11. If battery is incorrectly replaced, it may cause explosion. Replace only with the same or equivalent type.


# WHAT'S INCLUDED

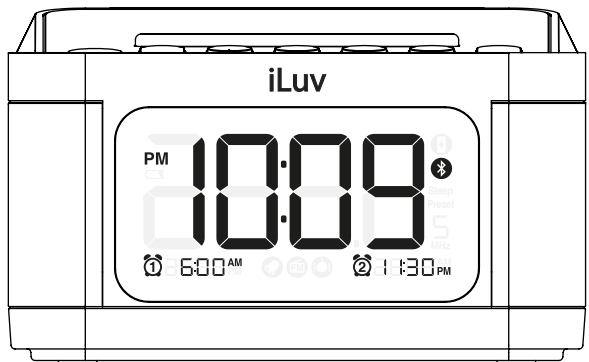 


TimeShaker 6Q Wow

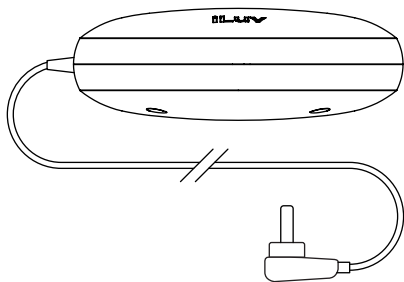 

Wired Shaker

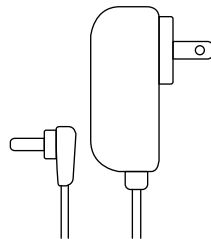 


Power Adapter

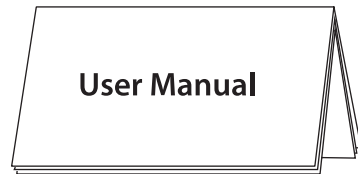 


User Manual

# OVERVIEW OF THE PRODUCT
 
## Top

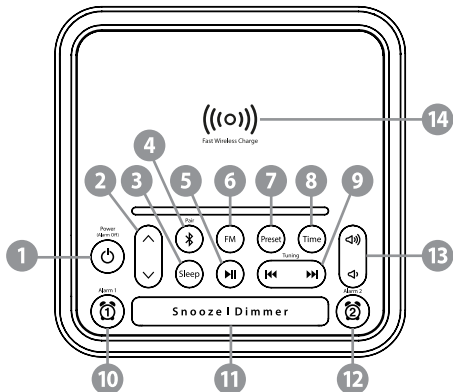


## Front

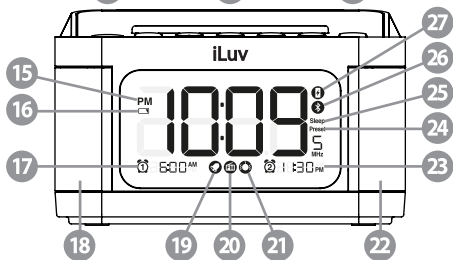 


- 1 POWER/ALARM OFF
- 2 UP/DOWN (Setup only)
- 3 SLEEP
- 4 BLUETOOTH/PAIR
- 5 PLAY/PAUSE
- 6 FM RADIO
- 7 PRESET
- 8 TIMESET
- 9 TUNING -/+
- 10 ALARM 1 ON/OFF/SET
- 11 SNOOZE/DIMMER
- 12 ALARM 2 ON/OFF/SET
- 13 VOLUME -/+
- 14 WIRELESS CHARGING PAD
- 15 PM INDICATOR
- 16 LOW BACKUP BATTERY INDICATOR
- 17 ALARM 1 INDICATOR
- 18 LEFT SPEAKER
- 19 BUZZER INDICATOR
- 20 FM RADIO INDICATOR
- 21 SHAKER INDICATOR
- 22 RIGHT SPEAKER
- 23 ALARM 2 INDICATOR
- 24 PRESET INDICATOR
- 25 SLEEP INDICATOR
- 26 BLUETOOTH INDICATOR
- 27 WIRELESS CHARGING INDICATOR

## Back

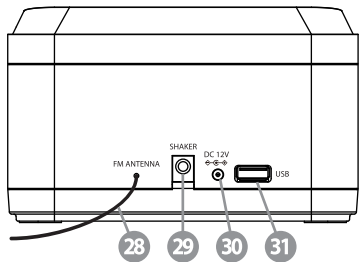 

- 28 FM RADIO ANTENNA
- 29 SHAKER JACK
- 30 DC POWER JACK
- 31 USB CHARGING PORT
- 32 BATTERY COMPARTMENT COVER

## Bottom

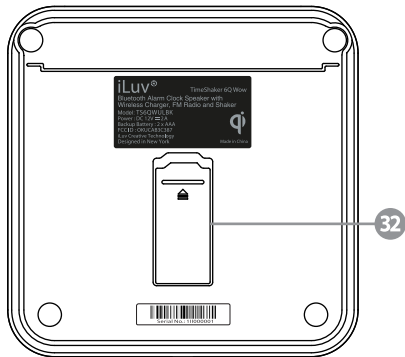 


## CONNECTING POWER

Connect the DC plug of the power cord to the **30 DC POWER JACK** on the back of the unit and connect the AC plug to a nearby wall outlet.

## CONNECTING SHAKER

 
- 1 Connect the plug of the shaker cord to the **29 SHAKER JACK** on the back of the unit.
- 2 Place the shaker under the pillow.

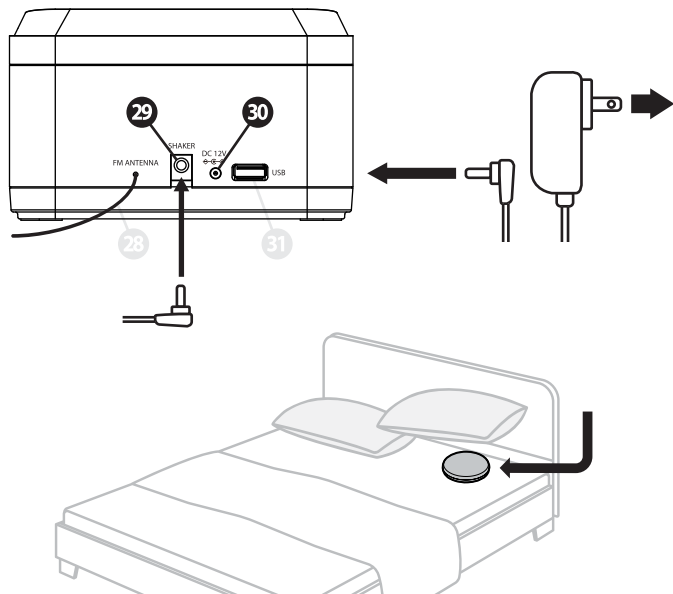

# SET CLOCK TIME

**!** The default time is set to **12:00AM** in 12 Hour Time format.  
(The display will be blinking if the clock time is not set.)

 - 1 Press & HOLD **8 [Time]** for 2 seconds to enter the **Time Setup** mode.
- 2 Press **2 [Up/Down]** to toggle between 12hr or 24hr formats and press **8 [Time]** to make selection.
- 3 While **Hour** is blinking, Press **2 [Up/Down]** to adjust (Press & HOLD to fast adjust) and press **8 [Time]** to set. The **15 PM INDICATOR** will be on when the time is advanced to the **PM** time in the 12hr format.
- 4 While **Minute** is blinking, press **2 [Up/Down]** to adjust (Press & HOLD to fast adjust) and press **8 [Time]** to set and exit the **Time Setup** mode.

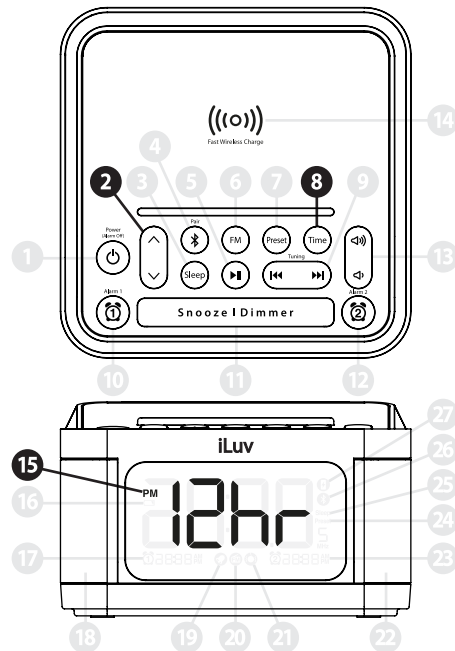


# SET ALARMS

## ! TO SET AN ALARM:

Alarm Time > Alarm Source > Alarm Sound Volume

Default Alarm Time : Alarm 1 - 6:00 AM, Alarm 2 - 7:00 AM

 - 1** Press & HOLD **10** [**Alarm 1**] for 2 seconds to enter the **ALARM SETUP** mode. Once in the alarm setup mode, the display will start blinking.
- 2** **Set Alarm Time:**  
While Hour is blinking, press **2** [**Up/Down**] to adjust (Press & HOLD to fast adjust) and press **10** [**Alarm 1**] to set. The **15** **PM INDICATOR** will be on in the 12hr format when the time is advanced to the PM time.  
While Minute is blinking, press **2** [**Up/Down**] to adjust (Press & HOLD to fast adjust) and press **10** [**Alarm 1**] to set.

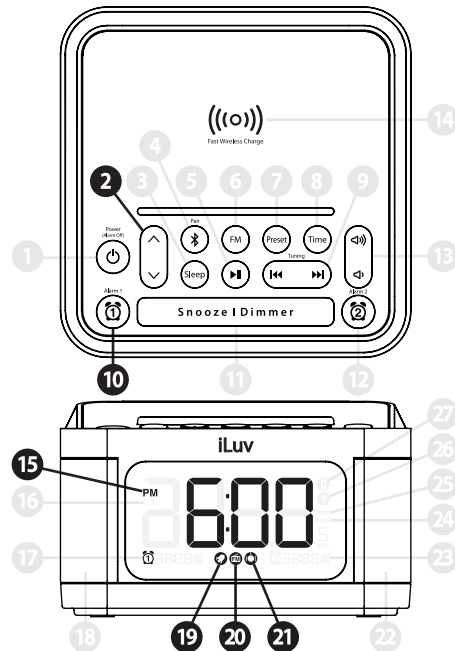



### 3 Choose Alarm Source:

Press **2** [Up/Down] to choose alarm source among **19 Buzzer** or **20 FM Radio** or **21 Shaker** or **19 21 Buzzer + Shaker** or **20 21 FM Radio + Shaker**. The source you are currently setting will blink.

Press **10** [Alarm 1] to exit setting or set the alarm sound volume.

#### 3-1 Set Buzzer or Radio Volume:

Press **2** [Up/Down] to adjust alarm sound volume level between **V5** to **V30** from initial level **V15**.

 
Press **10** [Alarm 1] to make selection.

*(Tuned channel on the radio will be used for the radio alarm.)*

**4** Once the alarm has been set, the alarm will be ready with the corresponding alarm indicator on.

#### Note:

Apply same routine to set **Alarm 2** with **12** [Alarm 2] button.

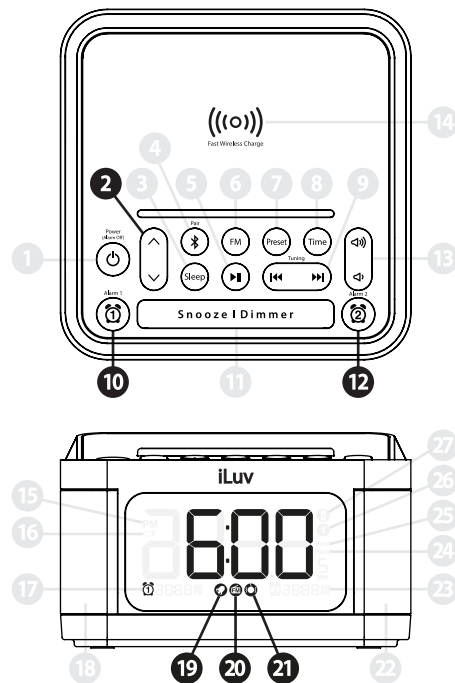

## ENABLE/DISABLE ALARM

 
**!** Please make sure if any of **Alarm 1** or **Alarm 2** is disabled by turning each one off, specified alarm sound or vibration won't be played at the alarm time. It should be turned on again to be enabled.

Alarms can be **Enabled/Disabled** by pressing **10** [**Alarm 1**] or **12** [**Alarm 2**].

When **17** [**1**] and/or **23** [**2**] is showing, the alarm is set to **ON** and will activate at the scheduled time. If the indication is not showing, the alarm is set to **OFF**.


### Note:

**Shaker** works only when properly connected to the unit.

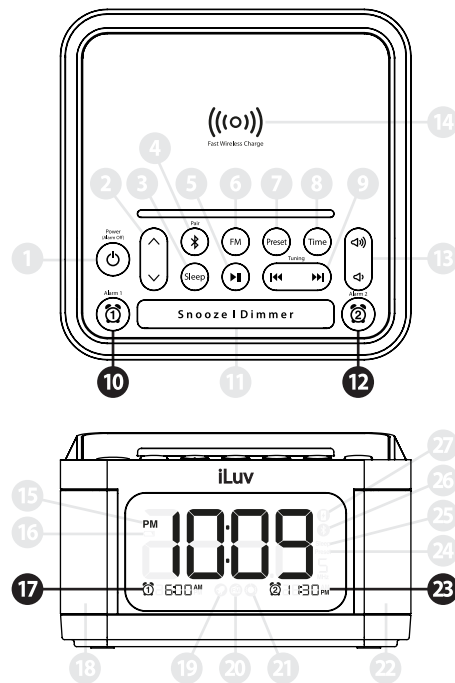



# SNOOZE/STOP ALARM

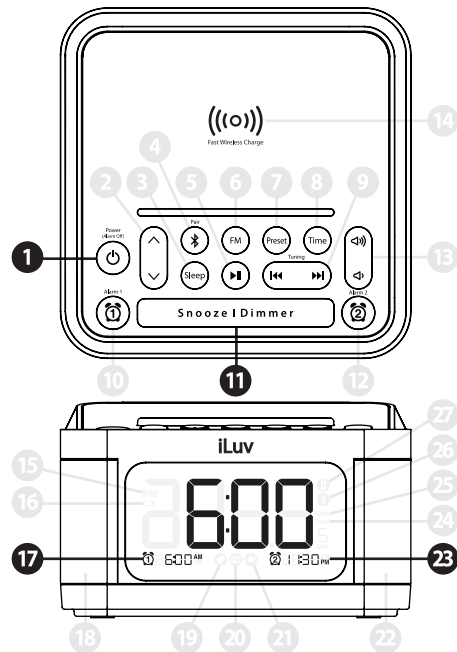 
- 1 When the alarm is activated, the corresponding **17 Alarm 1** or **23 Alarm 2** indicator will blink on the display.
- 2 Press **11 [Snooze]** to temporarily silence the alarm. The alarm will be delayed with 9 minutes interval to be recurred. The corresponding **17 Alarm 1** or **23 Alarm 2** indicator will blink on the display during the snooze period.
- 3 To **STOP** the alarm completely, press **1 [Power]**. This will stop the alarm until the next alarm time.





# SLEEP TIMER FUNCTION

 **!** The Sleep Timer Function allows you to set to stop the **FM Radio** or **Bluetooth** after the specified time has elapsed.

- 1 Press **1** [  ] to turn on the audio function.
- 2 Press **4** [  ] or **6** [ **FM** ] to select desired audio source from **Bluetooth** or **FM Radio**. (Go to page 16 for Bluetooth and page 14 for FM Radio to refer setup instructions of each.)
- 3 Press **3** [ **Sleep** ] to set the sleep timer while **Bluetooth** audio is playing. Continue to press **3** [ **Sleep** ] until reach to the desired timer from **10** to **90** in 10 minutes interval and wait 5 seconds to keep the selected timer: **90 > 80 > ... > 10 > OFF**
- 4 **25** Sleep indicator will be displayed once the sleep timer is set.

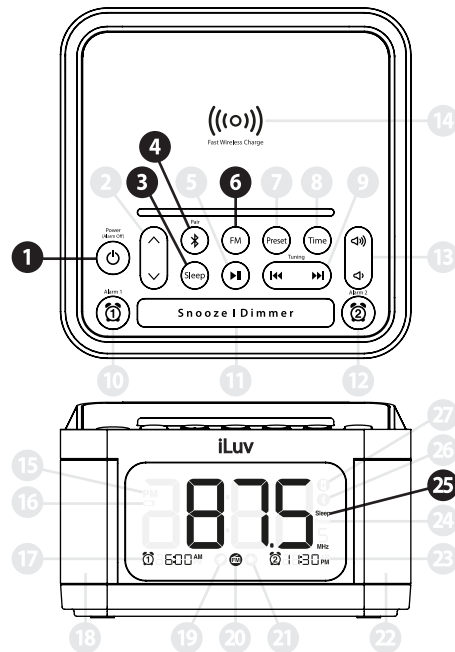


- 5** The **Bluetooth** audio or **FM Radio** will be automatically turned off if the set timer expires.
- 6** To check the remaining time until sleep, simply press **3 [Sleep]**. Timer will be changed to the next timer interval if **3 [Sleep]** is pressed again while the remaining time is displayed.
- 7** To turn off the timer, press **3 [Sleep]** repeatedly until the value toggles to **OFF** and wait 5 seconds. **25 SLEEP** indicator will be disappeared.

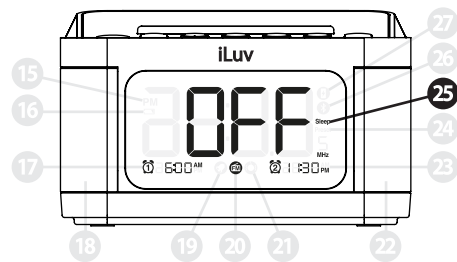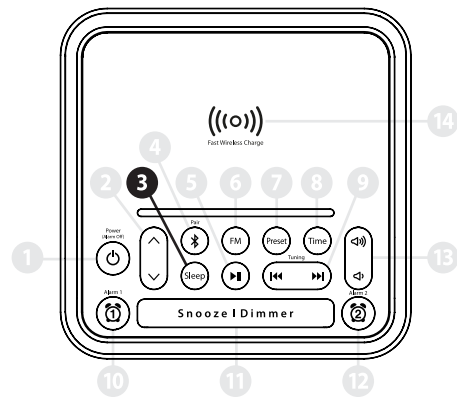  

## USING FM RADIO

 - 1 Unravel and extend the antenna to improve the FM radio signal reception.
- 2 Press **1** [⏻] to turn on the audio function.
- 3 Press **6** [FM] to select FM Radio.
- 4 Press **9** [⏪] or [⏩] to change the FM radio frequency.
- 5 Press & HOLD **9** [⏪] or [⏩] to automatically scan available channel.
- 6 To turn the FM radio off, press **1** [⏻].

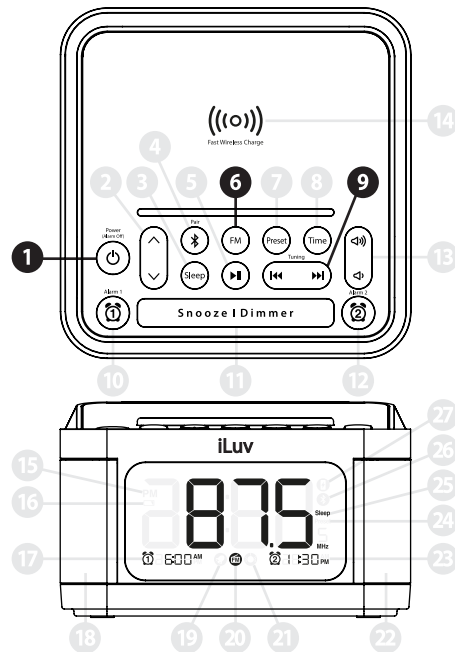


# SETTING FM RADIO PRESETS

**!** Preset option is only available when the Radio is on.

- 1 While FM radio is turned on, press **9** [**⏪**] or [**⏩**] to select the desired frequency.
- 2 Press & HOLD **7** [**Preset**] until the preset number is blinking.
- 3 Toggle through **9** [**⏪**] or [**⏩**].
- 4 Press **7** [**Preset**] to program the preset with the selected frequency.

# USING FM RADIO PRESETS


 
- 1 While FM radio is turned on, Press **7** [**Preset**] and press **9** [**⏪**] or [**⏩**] to change the preset stations: **P01** > **P02** > ... > **P20**

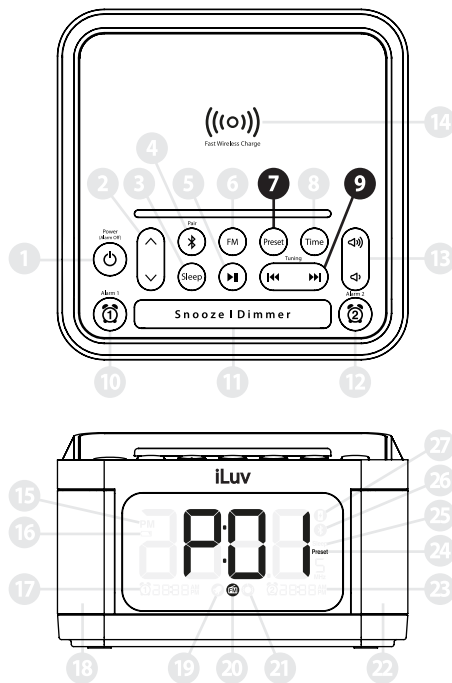

## PAIRING WITH OTHER DEVICE

**!** Effective Bluetooth range: 33ft (10m)

  - 1 Press **1** [⏻] to turn on the audio function.
- 2 Press **4** [📶] to select Bluetooth.
- 3 If the unit is turned on first time, it will enter the Bluetooth Pairing mode automatically and blink **26** **Bluetooth** indication.
- 4 Go to settings - Bluetooth on your mobile device and turn on Bluetooth. iPhone/iPad will scan devices automatically and press **Scan** on Android devices.
- 5 Tap “iLuv TimeShaker 6Q Wow” from the discovered devices list.

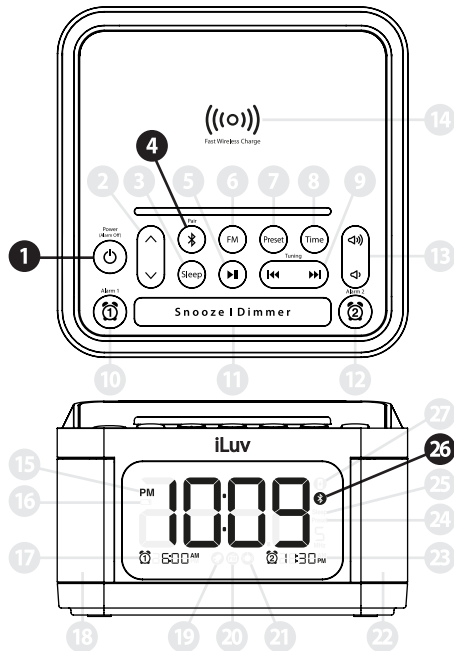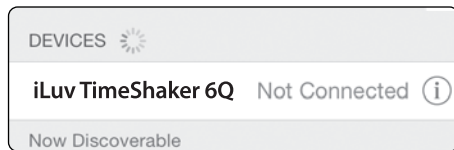




- 6** Once two devices are connected successfully, a voice prompt **“Bluetooth connected”** will be heard and the **26 Bluetooth** indication stops blinking.

**Note:**

 To enter the pairing mode manually, press & **HOLD 4 [ \* ]** for 2 seconds after turning on the audio function.


## AUTO RECONNECTING

- 1** If the paired mobile device is out of range or disconnected TimeShaker 6Q Wow Bluetooth, the **26 Bluetooth** indication will start to blink. In case of out of range, connection will be restored automatically if the pairing device appears in the range again.
- 2** In case of disconnection or if the connection is not restored automatically, press & **HOLD 4 [ \* ]** for 2 seconds to reconnect or restart pairing.

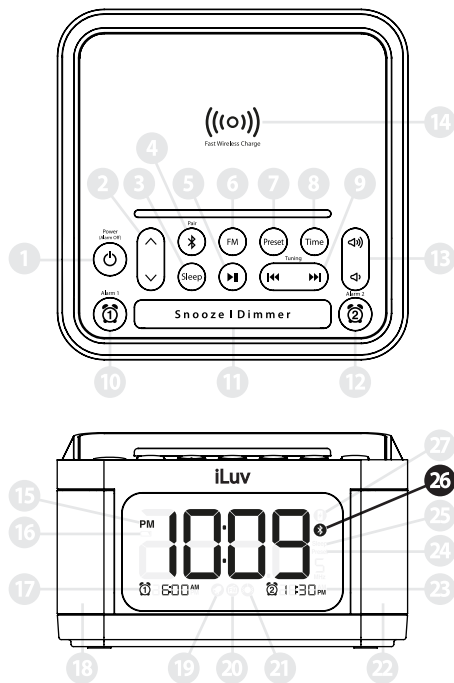


# MUSIC PLAYBACK

 - 1 Once connected to your device, play a music or audio source on your preferred app.
- 2 Press **5** [**▶||**] to play your music.
- 3 Press **5** [**▶||**] to pause while music is playing
- 4 Press **13** [**Volume Up/Volume Down**] to increase or decrease volume (00-30).
- 5 Press & HOLD **9** [**⏮**] to skip to the previous track.
- 6 Press **9** [**▶||**] to skip to the next track.

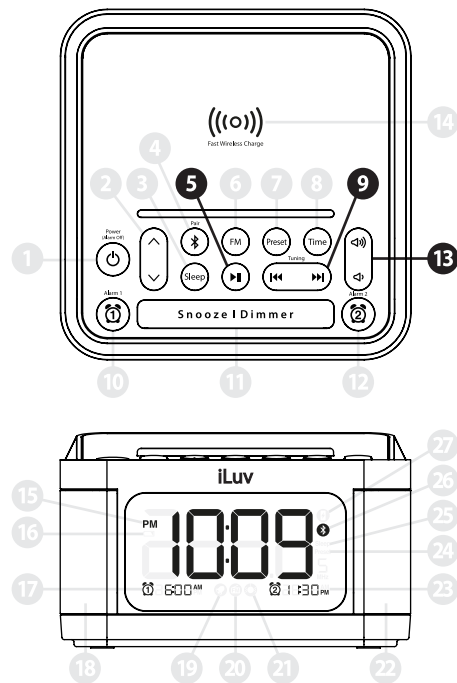

# DISPLAY DIMMER

 - 1 Press **11** [*Snooze/Dimmer*] to adjust the brightness in 11 levels circulating form **100** (maximum) to **00** (dimmed out) by 10.
- 2 Default brightness level is **100**.

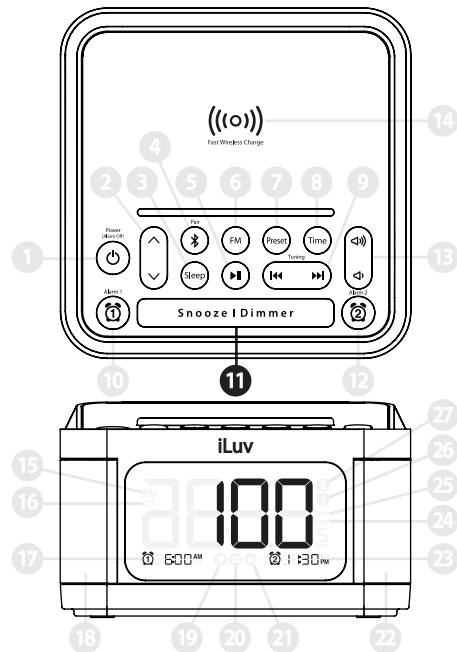


**!** IT IS SUGGESTED TO CHARGE YOUR PHONE WITH A WIRED CABLE INSTEAD OF A WIRELESS CHARGER DURING PHONE SOFTWARE UPDATE. OTHERWISE, CHARGE YOUR PHONE FULLY BEFORE THE PHONE SOFTWARE UPDATE.

Place your Qi enabled smartphone on the center of the **14** Wireless charging pad.

## Compatible Products for Wireless Charging:

 iPhone XS/XS Max/XR/X/8/8 Plus;  
Samsung Galaxy S10/9/8/7/6 series, Note 9/8/7/5 series;  
LG V35/V30 series, G7/G6 series; Google Pixel 3/3XL,  
Nexus6/5; and other Qi enabled smartphones/tablets  
and accessories

**!** PMA wireless charging system is not supported.

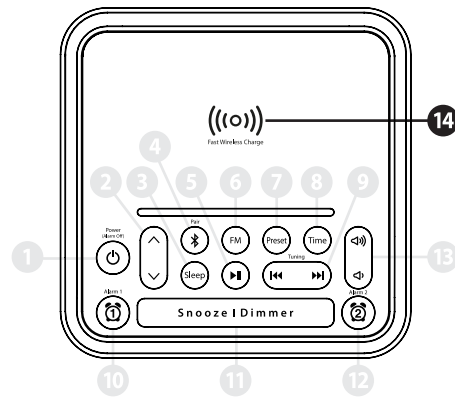

# WIRELESS CHARGE INDICATOR

**27** **Wireless Charging Indicator** is displayed on the right top corner of the display. Refer to the status indications below:

 
 
**1** **Off** : Standby Mode

**2** **On** : Charging


**3** **Blinking** : Abnormal

**\*If the charging indicator blinks:**

- Check if your device supports Qi wireless charging
- Place your device in the center of the **14** **Wireless charging pad**
- Remove any protective cases containing magnets, metal, or materials thicker than 0.12" (3mm)

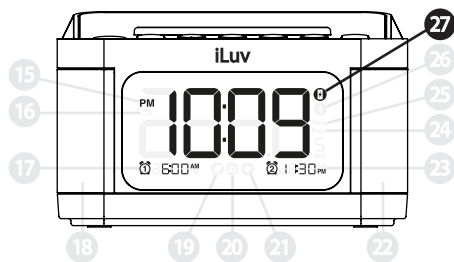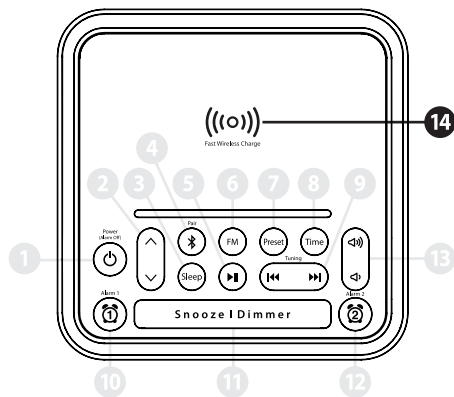

 - 1** To charge other devices such as a smartphone or tablet, connect one end of the USB charging cable (not included) to the **31** USB charging port on the back of the main unit.
- 2** The TimeShaker 6Q Wow cannot access the content of the connected device.
- 3** The USB Charging port is compatible to most smartphones, tablets, portable speakers, wireless headphones, wearables, etc.

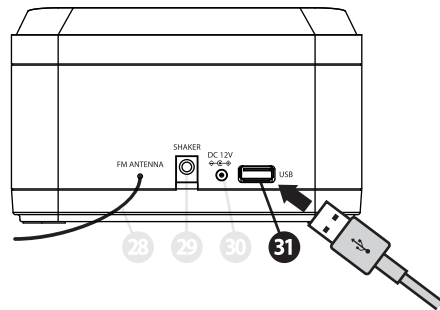

# BATTERY BACKUP OPERATION

## BACKUP BATTERY WILL NOT OPERATE THE CLOCK

- 1** TimeShaker 6Q Wow is equipped with a memory system that can be powered with two (2) AAA batteries (not included). The power failure protection circuit will not operate unless battery is installed.
- 2** The backup battery will save all previously programmed settings when normal household power is interrupted. The backup battery will not operate the unit's normal functions.
- 3** Normal operation will resume after the power is restored. You will not need to setup the time/alarms/radio if backup battery was installed before the power outage.





# SPECIFICATIONS

Tuner Range	FM: 87.5 – 108 MHz
Number of Preset Radio Stations	20
Amplifier Rated Output Power	4000mW(RMS)
AC Power Adapter	Input: AC 100-240V, 50/60Hz Output :DC 12V/2A.

# COMPLIANCE WITH FCC REGULATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment



Designed by iLuv in New York

## LIMITED WARRANTY

### WHAT IS COVERED?

iLuv Creative Technology (“iLuv”) warrants, to the original purchaser, that its products will be free from defects in materials, parts, and workmanship for the periods designated in each Product. The Warranty begins on the date of product purchase and covers a period of two years for products purchased in the European Union, and one year for products purchased in other countries (including the United States and Canada), iLuv can exercise the option, during any warranty service, to replace your product with a new or remanufactured unit, equivalent to your original purchase. For information on proper installation, operation and use consult the manual supplied with the product. If a replacement manual is required, visit our website, [www.iLuv.com](http://www.iLuv.com) to download a manual.

### FCC NOTICE (USA)

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## CUSTOMER SUPPORT

If you have any question or need support, please contact us by visiting <http://support.iLuv.com> or call our customer service department at 1-866-807-5946.

### EXCLUSIONS

This Warranty does NOT apply if the serial number is altered or removed. It does not cover cosmetic damage, antenna damage or loss, damage to AC power cords, cabinets, headbands, ear-pads, or damage due to power line surges, connection to an improper voltage source, the use of improper settings, general misuse, mishandling or improper application, accidents, acts of God, repairs attempted by an unauthorized service agent, or damage incurred while the product is being returned to iLuv. If the product was purchased outside the United States, please find an authorized distributor as listed on our web site: [www.iLuv.com](http://www.iLuv.com)

### OBTAINING WARRANTY SERVICE

Customers must obtain a Customer Return Authorization number (CRA) on our web site, [www.iLuv.com](http://www.iLuv.com) (EXPRESS CUSTOMER SUPPORT) to obtain a ticket. Fill out the on-line form including the product's Date of Purchase, its Model Number, a brief description of the problem, and your daytime telephone number, or customers in the United States and Canada may contact our Customer Service Department at (866) 807-5946 if the problem appears to be related to a defect in material or workmanship.

### RETURNING YOUR PRODUCT

The product must be accompanied with a dated proof of purchase, indicating the place of purchase, the model, and amount paid. Send the unit, prepaid, to the address below in suitable protective packaging that meets UPS standards. You must include the CRA number on the outside box, and your telephone number and return shipping address within the package. Return shipments are at the customer's expense, and the return must be accompanied by the original proof of purchase. We strongly recommend insuring the shipment as appropriate because the customer is responsible for the product until it arrives at iLuv (for U.S. returns) or its authorized distributor (for all other countries). REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. iLuv SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state and country to country.

### INSTRUCTIONS ON ENVIRONMENT PROTECTION

Do not dispose of this product in the usual household garbage at the end of its life cycle; bring it to a collection point for the recycling of electrical and electronic appliances. This symbol on the product means the instructions for use or the packing will inform about the methods for disposal. The materials are recyclable as mentioned in its marking. By recycling, material recycling, or other forms of re-utilization of old appliances, you make an important contribution to protect the environment. Please inquire at your local community administration for the authorized disposal location.

**iLuv Creative Technology**  
**2 Harbor Park Drive**  
**Port Washington, NY 11050**