

Instructions Manual for

KA1000DKTX Door Signal Transmitter

Install Door Signaler Transmitter

A. Door Knock:

Hook the door knock on top of the door (Fig 1.1). Turn the door knock transmitter on. Knock on the other side of the door to make sure it is functioning properly.

B. Doorbell:

Clip the doorbell by the doorknob facing out. Press the button to test. (Fig 1.2 & 1.3)

FIG. 1.1 (inside door)

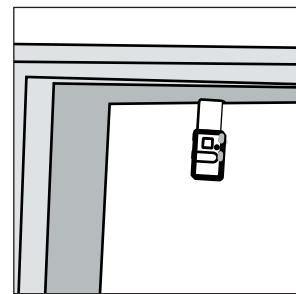


FIG. 1.2 (outside door)


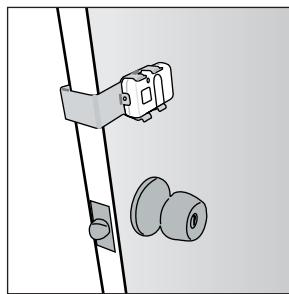


FIG. 1.3 (outside door)

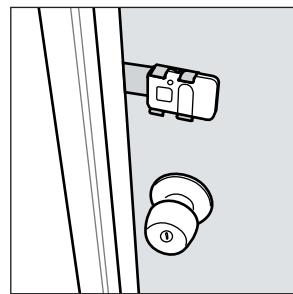


Change system security code

If your clock encounters interference and repeatedly activates itself for no obvious reason then maybe a system nearby in your neighborhood triggering the alarm. Change the channel switch settings on all transmitters and repeat the above steps for the new settings. (See Figure 2.1).

If your KA1000 Alarm Clock's memory is full, unplug the clock and take the battery out for 5 seconds then repeat the setup procedure.

If the clock is going be used with the Alarm Monitor KA300, take one transmitter and change to a new operation code then repeat the setup procedure for both KA1000, KA300RX and/or KA1000RR.

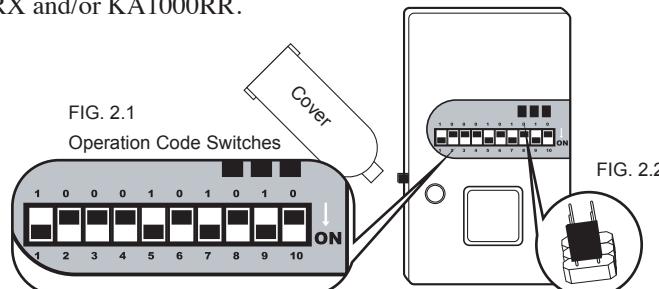

Switch Channel for path of flashing

The default setting is on Channel One (CH1) as seen from FIG 2.2 on above.

Channel Jumper



FIG. 3.1

To change Channel, take the black chip out and put in Channel Three (CH3)

Channel Jumper

 


FIG. 3.2

Flash Path

When set your preference of how much flash it will appear on the lamp applicatoin from the Krown receiver (KA1000 Alarm Clock or KA1000RR)

CH1: 2x, 2x

CH2: 3x, 3x

CH3: 12x

WARRANTY

Your KA1000DKTX Door Signal Transmitter is covered for one (1) year from the date of purchase against all defects in materials and/or workmanship. Please fill out and send in the warranty cards as soon as possible.



3408 Indale Road, Fort Worth, TX 76116

Voice: (817) 738-2485

TTY/TDD: (817) 738-8993

VP: (682) 200-1331

Fax: (817) 738-1970

Email: info@krownmfg.com

Web Site: www.KrownMfg.com