 


USER MANUAL DW100T

PARTS & FUNCTION

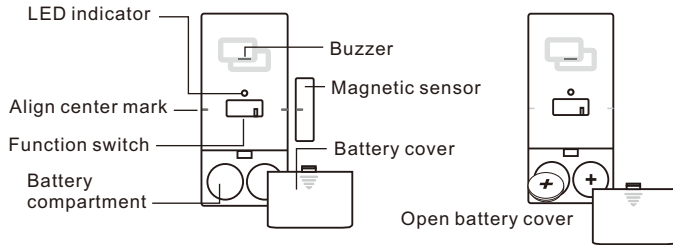

BATTERY INSTALLATION

CODE PAIRING & MELODY SELECTION

This magnetic transmitter works with the receiver (chime unit) & must be paired before using.

Step 1: Insert 2 pcs CR2032 batteries to the transmitter.

Step 2: Insert the batteries into the receiver (chime unit).

 
Step 3: Enter pairing mode for the receiver (chime unit). Press & hold the ● zone selector button for 3 seconds. The LED in zone #1 will flash.

Step 4: Press the ● zone selector button again to move to the zone you wish to pair with. Press the ♪ melody selector button to scroll through the melodies. Once you hear a melody you prefer, do not press any button as the melody is set for that zone.

Step 5: Once you have selected the zone & melody you want, activate the magnetic sensor by holding the transmitter & the magnet together (make sure alignment marks line up on the magnet & transmitter), then move them apart to activate the bell or siren alerts.

Note: Transmitter must be set to "Bell" to pair with the receiver (Chime Unit). Magnet must be no further than 3/16" inch from transmitter make sure alignment marks of the magnet & transmitter are lined up. Alignment marks can be difficult to see, these marks are centered on the units. If magnet is more than 3/16" from the transmitter proper contact will not be made.

If successful, the receiver (chime unit) will generate a short tone. Press the ● zone selector button to exit pairing mode, the system is now ready to use.

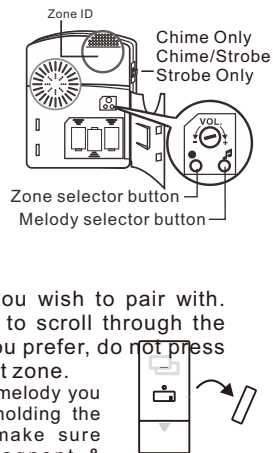


MOUNTING

Install two CR2032 batteries into the battery compartment.

Remove the protective paper of the double sided tape & apply to the back of the unit. Remove the other side of the protective paper & place on surface to be mounted.

 Stick the alarm transmitter to the window or door frame. Next, stick the magnetic unit centered with alignment marks next to transmitter alignment marks.

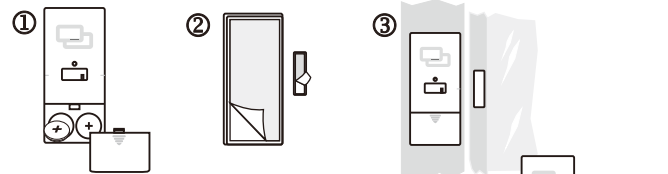

When the magnet moves away from the transmitter unit, the siren or bell sound will be activated & will send out a signal to the receiver (chime unit).

Siren Mode

 
The siren will automatically turn off after 15 seconds & will repeat itself every 30 seconds if the door or window does not close or it is manually turned off at the unit.

Bell Mode


When in bell mode it will generate one Ding Dong tone, it will generate a second Ding Dong tone after 30 seconds & will repeat itself every 30 seconds until the door is closed or manually turned off at the unit.

BATTERY LOW INDICATOR

If a zone LED light is blinking, that indicates that the battery is low for this transmitter. You must replace the battery as soon as possible. If the white flash at the top of the chime blinks every 5 seconds, this indicates the receiver batteries are very low. When you see the white flash every 5 seconds, you must replace the batteries of the receiver immediately.

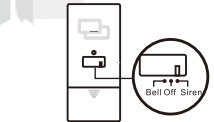

 Using as alarm siren transmitter: Slide the switch to siren position



Using as bell transmitter: Slide the switch to bell position

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.

For Customer Support Please Contact:

Silent Call / MyAlert

Sales@Silentcall.com /1-800-572-5227

scdirectsales.com for DIY instructional videos and User Guides

