 
USER MANUAL


TR100T



CODE PAIRING & MELODY SELECTION

The telephone transmitter works with the receiver (chime unit or vibration pad) & must be paired prior to use.

- Step 1: Insert the battery into the telephone transmitter.
- Step 2:Insert the batteries into the receiver (chime unit).
- Step 3:Enter pairing mode for the receiver (chime unit). Press & hold the zone selector button for 3 seconds. The LED in zone #1 will flash.

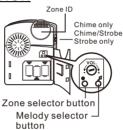

- Step 4: Press the zone selector button again to move to the zone you wish to pair with. Press the \$\mathbb{I}\$ melody selector button to scroll through the melodies. Once you hear a melody you prefer, do not press any button as the melody is set for that zone.
- Step 5: Once you have selected the zone & sound, press the test button on the telephone signaler once. If successful, the receiver will generate a short tone. Press the zone selector button to exit pairing mode unit is now ready for use.

Alert Reset Button

To cancel any alert on the remote receiver press the reset button. The reset button is located on the back of the receiver behind the flasher.

OPERATION



Plug the telephone line into the telephone RJ11 jack refer to the diagram. The system is now ready to use.

BATTERY LOW INDICATOR

If a zone LED light is blinking, that indicates that the battery is low for this transmitter. You must replace the battery as soon as possible. If the white flash at the top of the chime blinks every 5 seconds, this indicates the receiver batteries are very low. When you see the white flash every 5 seconds, you must replace the batteries of the receiver immediately.

CODE CONFLICT

If the telephone transmitter coding is the same as another transmitter, you must change the frequency code. After you have changed the frequency code, you will have to pair/connect the telephone transmitter with the receiver (chime unit).







Open the cover Remove the battery

Press & hold the test button, insert the battery while still holding the button for 5 seconds. The LED light will flash 5 times, when a new frequency code is generated.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.

For Customer Support Please Contact:

Silent Call / MyAlert

Sales@Silentcall.com/1-800-572-5227

scdirectsales.com for DIY instructional videos and User Guides









