

# CONTOUR ES CONTROL GUIDE

## MUSIC

#### +/- VOLUME

Increase volume - press the + button. Decrease volume - press the - button.

**PLAY OR PAUSE A SONG OR VIDEO** Press the multi-function button (MFB) once. Press again to resume playback.

**SKIP TO THE NEXT SONG OR CHAPTER** Press the MFB twice quickly.

**I** GO TO THE PREVIOUS SONG OR CHAPTER Press the MFB three times quickly.

**FAST-FORWARD** Press the MFB twice quickly, holding the second click.

#### 

Press the MFB three times quickly, holding the third click



**VOLUME +** 

**VOLUME** -

MFB

## PHONE

**©ANSWER OR END A CALL** Press the MFB once to answer. Press again to end the call.

**© DECLINE AN INCOMING CALL** Hold down the MFB for about

two seconds, then let go.

#### **SWITCH TO AN INCOMING OR ON-HOLD CALL AND PUT THE CURRENT CALL ON HOLD**

Press the MFB once. Press and hold to switch back to the first call. A short click will end the current call and open the held call.

### **VOICE CONTROL**

To access Siri press and hold the MFB. To continue a conversation, press and hold the button each time vou want to talk.

**FOLLOW US** 

Join the Decibullz community on social media for the latest product news, special discounts and promotions. **USE #DECIBULLZ** 



\*Compatible with iOS®, full controls might not be available for some devices.