 



# INSTRUCTION MANUAL (V3.4)

Krown Visual VibeAlert™: With USB charging port and bed shaker


Front View

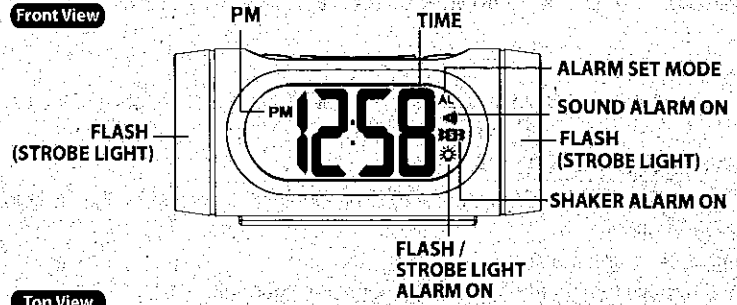

 
Top View

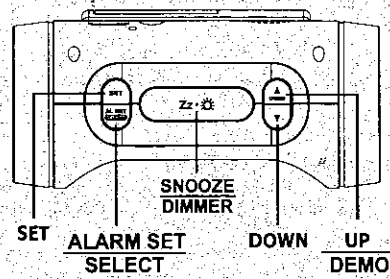

Bottom View

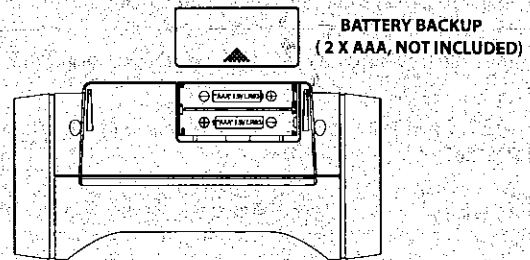 

Back View

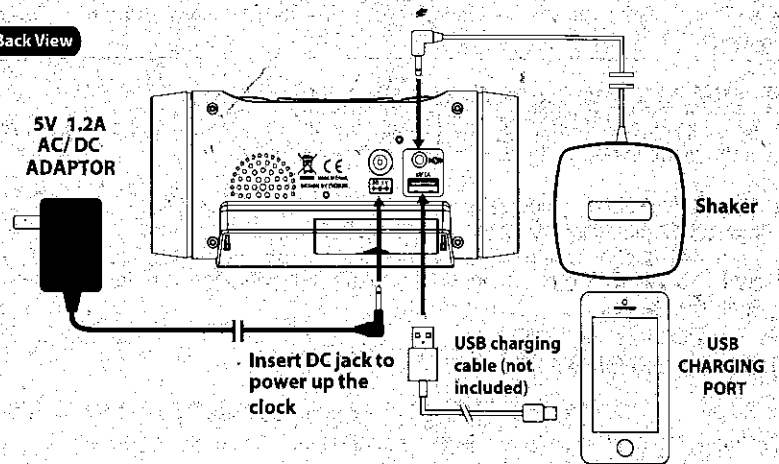 

## **CAUTION**

RISK OF EXPLOSION IF BATTERIES ARE REPLACED WITH AN INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING TO BATTERY INSTRUCTIONS.

## **INSTALLATION**

Plug the AC/DC adaptor into an AC outlet, and then plug the DC jack into the back of the unit.

## **BACKUP BATTERY INSTALLATION**

Your clock requires 2 x AAA batteries (not included) to provide backup power for the clock in the event of a power interruption.

1. Place your unit face down on a flat surface.
2. Slide open and remove the battery cover at the bottom of your unit.
3. Insert 2 x AAA batteries into the battery compartment by observing the correct "+" and "-" polarity
4. Replace the battery cover.


Inspect the batteries annually (at a minimum), replacing as necessary. A leaking battery can damage your clock.

## **TO SET TIME, 12/24 HR FORMAT, AND THE SNOOZE DURATION**

1. Press **SET** once, the hour digits "12" flash. Press ▲ or ▼ to set the time in hours (hold ▲ or ▼ to advance rapidly).
2. Press **SET** again, the minute digits "00" flash. Press ▲ or ▼ to set the time in minutes. (hold ▲ or ▼ to advance rapidly).
3. Press **SET** again, the display shows "12Hr" and flashes. Press ▲ or ▼ to select "12Hr" or "24Hr" time format.  
If "12Hr" is selected, the **PM** will appear on the left side to indicate the afternoon Time; there is no **AM** indicator.
4. Press **SET** again, the display shows "05" and flashes. Press ▲ or ▼ to select your snooze time from 5 to 60 minutes.
5. Press **SET** again or if no key is pressed for approximately 10 seconds the clock will exit the setting mode.

## **TO SET THE ALARM (default at 6:00 AM)**


1. Press and hold **AL SET / SELECT**, the **AL** appears and the alarm's hour digit flash. Press ▲ or ▼ to set the alarm in hours. (hold ▲ or ▼ to advance rapidly).
2. Press **AL SET / SELECT** once again, the alarm's minute digit flash. Press ▲ or ▼ to set the alarm in minutes. (hold ▲ or ▼ to advance rapidly).
3. Press **AL SET / SELECT** once again, LCD displays "HI" (vibration at HI level) and **»3»** flash, press ▲ or ▼ to select:-  
**HI (strong vibration level)**  
**LO (soft vibration level)**

4. Press **AL SET / SELECT** once again, LCD displays "F1" and  flash, press **▲** or **▼** to select the alarm tone (frequency):-

**F1 (low tone, 800 Hz)**

**F2 (mid tone, 1 KHz)**

**F3 (high tone, 1.5 KHz)**

5. Press **AL SET / SELECT** once again, LCD displays "L1" (low) and  flash, press **▲** or **▼** to select the alarm sound level :-

**L1 (low)**

**L2 (medium)**

**L3 (high)**

6. Press **AL SET / SELECT** once or if no key is pressed for approximately 10 seconds the clock will exit the alarm setting mode.

### **TO SELECT THE ALARM MODE**

At normal time display mode, press **AL SET / SELECT** one at a time to activate the alarm(s), the corresponding alarm indicator(s) on the right side of the time display will be on:-



: only shaker alarm is activated



: both sound and shaker alarm are activated



: both strobe light and shaker alarm are activated



: strobe light, sound and shaker alarm are activated

Press **AL SET / SELECT** once more to turn off all the alarms, all alarm indicators disappear.



### **TO STOP AND RESET THE ALARM TO COME ON THE NEXT DAY**

When the alarm is sounding, the corresponding alarm indicator flashes. Press **AL SET / SELECT** once to stop the alarm and reset it to come on the following day. After that, the corresponding alarm indicator stays on the display.

### **TO USE THE SNOOZE**

When the alarm is sounding, press **Zz • ☀** once, the alarm will stop temporarily and the corresponding alarm indicator keeps flashing. Alarm will resume after the set snooze duration is over.

### **TO USE THE DIMMER**

There is a 3-level brightness control for the LCD display. Press **Zz • ☀** to adjust the brightness (**HI / LO / OFF**) of the LCD display. This can only be done when the unit is not sounding.

### **TO USE DEMO MODE**

Press and hold **▲** button 2 seconds will trigger the buzzer, strobe light and shaker.

### **TO CHARGE A SMARTPHONE WITH THE USB PORT**

Connect the charging cable of your mobile phone to the A-type USB port at the back of the unit, then connect the other end to your mobile phone. The clock radio will charge the mobile phone automatically.

## **TROUBLESHOOTING**

If your clock displays the incorrect time or does not function properly then unplug the DC jack to disconnect the AC power (and remove the backup batteries). Leave it unplugged for a few minutes and then plug in the adaptor to repower your clock. The clock is now restored to the factory settings and is ready to be set again.

## **CARE OF YOUR PRODUCT**

1. Place your clock on a stable surface, away from sources of direct sunlight or excessive heat or moisture.
2. Protect your furniture when placing your unit on a natural wood and lacquered finish by using a cloth or protective material between the clock and the furniture.
3. Clean your unit with a soft cloth moistened only with mild soap and water. Stronger agents such as Benzene, thinner or similar chemicals can damage the surface of the unit. Make sure the unit is unplugged before cleaning.
4. If the unit is not to be used for a prolonged period, such as a month or longer, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the batteries.

## **SPECIFICATIONS**

### Default Settings:

Time format	12 hour	Alarm duration	1 hour
Time	12:00	Snooze duration	5 to 60 minutes
Alarm	6:00 (AM)		
Alarm & shaker level	HI		
Alarm sound frequency	F-1		
Alarm sound level	L1 (low)		
Snooze duration	05 (5 minutes)		

Product comes with a 1 year limited Manufacturer's warranty

## **Need Help?**

Krown Manufacturing, Inc. product support is here to ensure you are completely satisfied with your product.

## **Contact us!**



(817)738-2485

Or



info@krownmfg.com

## **Support Hours**

Monday – Friday  
8:00 am – 4:00 pm CST

